



MW71B
ME71B

Lò vi sóng

Hướng dẫn sử dụng và hướng dẫn nấu

khởi dậy những tiềm năng

Cám ơn quý vị đã mua sản phẩm này của Samsung.
Vui lòng đăng ký sản phẩm tại địa chỉ web

www.samsung.com/register

**Planet
First** **100%
Recycled Paper**

 
Hướng dẫn sử dụng này được sản xuất từ 100% giấy tái chế.



NỘI DUNG

Lò.....	2
Phụ kiện.....	3
Bảng điều khiển.....	3
Sử dụng sách hướng dẫn này.....	4
Thông tin an toàn.....	4
Lắp đặt lò vi sóng	11
Làm gì khi nghi ngờ hoặc chắc chắn lò vi sóng bị hư hỏng	11
Nấu nướng/Hâm nóng.....	12
Mức công suất.....	12
Ngừng nấu.....	12
Điều chỉnh thời gian nấu.....	13
Rã đông thực phẩm thủ công.....	13
Sử dụng chức năng hâm nóng nhanh.....	13
Cài đặt thông số hâm nóng nhanh	13
Hướng dẫn về dụng cụ nấu.....	14
Vệ sinh lò vi sóng.....	15
Các thông số kỹ thuật.....	15

LÒ

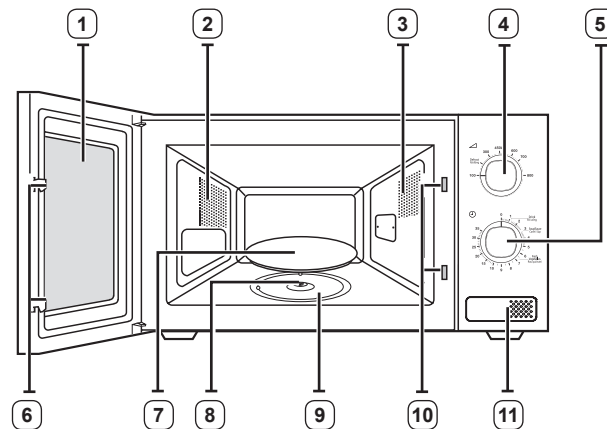

- | | |
|--------------------------------------|---------------------|
| 1. CỬA LÒ | 7. ĐĨA XOAY |
| 2. LỖ THÔNG HƠI | 8. ĐỂ XOAY |
| 3. ĐÈN | 9. VÒNG XOAY |
| 4. NÚM ĐIỀU KHIỂN THAY ĐỔI CÔNG SUẤT | 10. LỖ KHÓA AN TOÀN |
| 5. NÚM THỜI LƯỢNG | 11. NÚT NHẤN MỞ CỬA |
| 6. THEN CỬA | |

 


PHỤ KIỆN

Tùy theo kiểu lò mà quý vị đã mua, quý vị sẽ được cung cấp một số phụ kiện có thể sử dụng theo nhiều cách khác nhau.

1. **Đế xoay**, đặt sẵn trên trục động cơ giữa lò.

Mục đích: Đế xoay làm quay đĩa xoay.




2. **Vòng xoay**, được đặt ở giữa tâm lò.

Mục đích: Vòng xoay nâng đỡ đĩa xoay.




3. **Đĩa xoay**, được đặt trên vòng xoay với tâm nằm trên đế xoay.

 Mục đích: Đĩa xoay là bề mặt nấu chính; có thể tháo gỡ dễ dàng để làm vệ sinh.



 **KHÔNG ĐƯỢC** vận hành lò vi sóng khi không có vòng xoay và đĩa xoay.

 BẢNG ĐIỀU KHIỂN

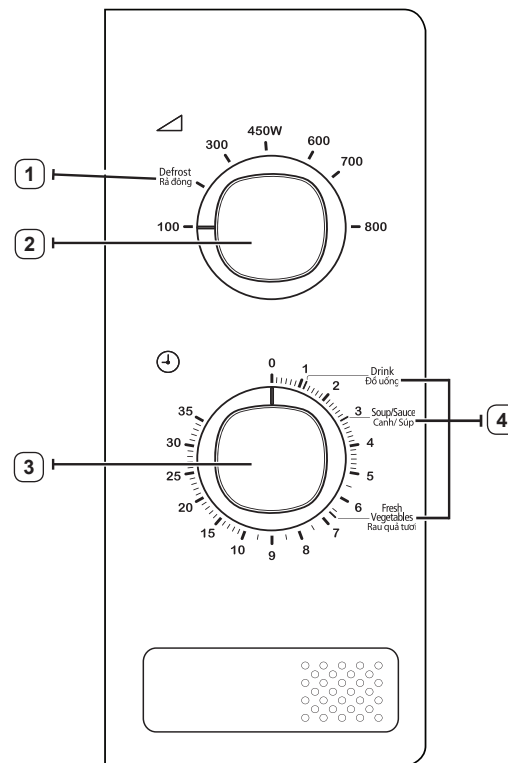

1. RÃ ĐÔNG
2. NÚM ĐIỀU KHIỂN THAY ĐỔI CÔNG SUẤT
3. NÚM THỜI LƯỢNG
4. HẠM NÓNG NHANH

SỬ DỤNG SÁCH HƯỚNG DẪN NÀY

Quý vị vừa mua một lò vi sóng SAMSUNG mới. Sách hướng dẫn sử dụng của quý vị cung cấp nhiều thông tin giá trị cho công việc nấu nướng bằng lò vi sóng:

- Các lưu ý an toàn
- Phụ kiện và dụng cụ nấu phù hợp
- Những lời khuyên hữu ích khi nấu nướng













Ở mặt trước của tập sách, quý vị sẽ thấy các hình vẽ minh họa lò vi sóng, và quan trọng hơn là bằng điều khiển, giúp quý vị tìm thấy các nút chức năng một cách dễ dàng.

THÔNG TIN AN TOÀN

- Trước khi vận hành lò, xin vui lòng đọc kỹ toàn bộ tài liệu hướng dẫn sử dụng này và cất nó ở một nơi an toàn gần lò để sử dụng về sau.
- Chỉ sử dụng lò theo đúng mục đích sử dụng dự định được mô tả trong tài liệu hướng dẫn sử dụng này. Lò này không dành cho những người (bao gồm trẻ em) dị tật, thiếu năng trí tuệ hoặc thiếu kinh nghiệm và kiến thức sử dụng, trừ khi được người chịu trách nhiệm về sự an toàn của họ giám sát và hướng dẫn. Những cảnh báo và hướng dẫn an toàn quan trọng trong tài liệu hướng dẫn sử dụng này không đảm bảo đề cập đến mọi hoàn cảnh và tình huống có thể xảy ra. Quý vị có trách nhiệm vận dụng lý trí và sự cẩn trọng của bản thân khi lắp đặt, bảo dưỡng, và vận hành lò.
- Vì những hướng dẫn vận hành sau đây đề cập đến nhiều mẫu sản phẩm khác nhau, những tính năng của lò vi sóng của quý vị có thể khác biệt đôi chút so với phần mô tả trong tài liệu hướng dẫn sử dụng này và không phải tất cả các cảnh báo đều có thể áp dụng. Nếu quý vị có bất kỳ câu hỏi hoặc mối quan ngại nào, xin vui lòng liên hệ với trung tâm dịch vụ khách hàng gần nhất hoặc tìm hỗ trợ và thông tin trực tuyến tại trang web: www.samsung.com.

Những ký hiệu và khuyến cáo an toàn quan trọng.

Những ký hiệu sau đây được sử dụng trong sách hướng dẫn sử dụng này:

 CẢNH BÁO	Tai nạn hoặc hành động thiếu an toàn có thể gây thương tổn nghiêm trọng hoặc gây chết người .
 KHUYẾN CÁO	Tai nạn hoặc hành động thiếu an toàn có thể gây thương tổn nhẹ cho người hoặc thiệt hại về tài sản .
 KHUYẾN CÁO	Để giảm thiểu nguy cơ hỏa hoạn, nổ, điện giật, hoặc thương tổn khi sử dụng lò vi sóng, xin vui lòng tuân thủ những khuyến cáo an toàn cơ bản này.
	KHÔNG ĐƯỢC thử.
	KHÔNG ĐƯỢC tháo rời.
	KHÔNG ĐƯỢC chạm vào.
	Tuân thủ nghiêm ngặt các hướng dẫn.
	Rút phích cắm ra khỏi ổ điện trên tường.
	Đảm bảo bếp được nối đất để tránh bị điện giật.
	Gọi điện đến trung tâm dịch vụ khách hàng để được giúp đỡ.
	Lưu ý
	Quan trọng

**CẢNH BÁO Những cảnh báo quan trọng về lắp đặt**

- ★ Việc lắp đặt lò này phải được thực hiện bởi một kỹ thuật viên đầy đủ chuyên môn về lò vi sóng và được nhà sản xuất huấn luyện. Xin xem thêm phần “Lắp đặt lò vi sóng”.

Cắm dây điện vào một ổ điện phù hợp trên tường hoặc trên cao và chỉ sử dụng ổ điện đó riêng cho bếp này. Cắm chặt phích cắm vào ổ điện trên tường. Ngoài ra, không được sử dụng dây nối điện.

- Không tuân thủ cảnh báo này và sử dụng chung một ổ điện trên tường cho các thiết bị khác hoặc sử dụng dây nối điện có thể gây ra điện giật hoặc hỏa hoạn.
- Không được sử dụng bộ biến thế. Nó có thể gây điện giật hoặc hỏa hoạn.

Việc lắp đặt bếp này phải được thực hiện bởi một kỹ thuật viên đầy đủ chuyên môn hoặc công ty dịch vụ.

- Không tuân thủ hướng dẫn này có thể gây ra điện giật, hỏa hoạn, nổ, hư hại sản phẩm hoặc thương tổn cho người.

Lò vi sóng chỉ được dự định để sử dụng trên mặt bếp hoặc trong không gian mở; không nên sử dụng lò vi sóng đặt trong tủ hoặc không gian kín.

- ✗ Không được lắp đặt bếp này gần bếp lò hoặc những vật liệu dễ cháy. Không được lắp đặt bếp này ở nơi ẩm ướt, trơn trượt hoặc bụi bặm, ở nơi có thể tiếp xúc trực tiếp với ánh nắng hoặc nước (mưa). Không được lắp đặt bếp này ở nơi có thể có khí đốt rò rỉ.
- Điều này có thể gây điện giật hoặc hỏa hoạn.

Bếp này không được dự định để lắp đặt trong các phương tiện giao thông đường bộ, nhà lưu động hoặc những phương tiện giao thông tương tự.

- ☞ Bếp này phải được nối đất phù hợp. Không được nối đất bếp này qua một ống dẫn khí đốt, ống nước bằng nhựa, hoặc đường dây điện thoại.
- Điều này có thể gây điện giật, hỏa hoạn, nổ, hoặc hư hại cho sản phẩm.
 - Tuyệt đối không được cắm dây điện vào một ổ điện không được nối đất đúng cách đồng thời phải đảm bảo rằng bếp tuân thủ các tiêu chuẩn của địa phương và quốc gia.

**KHUYẾN CÁO Những khuyến cáo về lắp đặt**

- ★ Bếp này nên được bố trí sao cho người sử dụng có thể dễ dàng tiếp cận phích cắm.

- Không tuân thủ khuyến cáo này có thể gây ra điện giật hoặc hỏa hoạn do rò rỉ điện.

Bếp cần được lắp đặt trên một nền cứng và cân bằng có thể chịu được trọng lượng của bếp.

- Không tuân thủ khuyến cáo này có thể gây rung lắc, phát ra tiếng ồn bất bình thường, hoặc gây hư hại cho sản phẩm.

Giữ khoảng cách phù hợp với tường khi lắp đặt bếp.

- Không tuân thủ khuyến cáo này có thể gây ra hỏa hoạn do không khí quá nóng.

Đảm bảo chiều cao tối thiểu của không gian trống cần thiết phía trên bề mặt nóc lò.

**CẢNH BÁO Những cảnh báo quan trọng về điện**

- ★ Thường xuyên lau sạch tất cả những dị vật ngoại lai như bụi bặm hoặc nước bám trên phích cắm và các tiếp điểm bằng một mảnh vải khô.

- Rút phích cắm ra khỏi ổ điện và lau sạch nó bằng một mảnh vải khô.
- Không tuân thủ cảnh báo này có thể gây ra điện giật hoặc hỏa hoạn.

Cắm phích cắm vào ổ điện trên tường theo đúng hướng sao cho dây điện chạy hướng xuống nền nhà.

- Nếu quý vị cắm phích cắm vào ổ điện theo hướng ngược lại, các sợi dây đồng nhỏ bên trong cáp điện có thể bị hư hại và điều này có thể sẽ gây ra điện giật hoặc hỏa hoạn.

- ✗ Cắm chặt phích cắm vào ổ điện trên tường. Không được sử dụng phích cắm đã hỏng, dây điện đã hỏng hoặc ổ điện trên tường có lỗ cắm bị lờn.

- Điều này có thể gây điện giật hoặc hỏa hoạn.

- ☐ Không được kéo hoặc gấp dây điện quá mức.
Không được xoắn hoặc cột chặt dây điện.
Không được treo dây điện trên một đồ vật bằng kim loại, đặt một vật nặng đè lên dây điện, luồn dây điện qua giữa các đồ vật, hoặc nhét dây điện vào khoảng trống phía sau bếp.

- Điều này có thể gây điện giật hoặc hỏa hoạn.

Không được nắm kéo phần dây khi muốn rút phích cắm ra khỏi ổ điện.

- Luôn luôn rút phích cắm ra khỏi ổ điện bằng cách nắm núm cao su của đầu cắm.
- Không tuân thủ cảnh báo này có thể gây ra điện giật hoặc hỏa hoạn.

- ☒ Nếu bếp hoặc dây điện bị hư hỏng hoặc tổn hại, hãy liên lạc với trung tâm dịch vụ khách hàng gần nhất.

Những khuyến cáo về điện

- ☒ Rút phích cắm ra khỏi ổ điện khi không sử dụng bếp trong thời gian dài hoặc khi có giông bão/giông nhiệt.

- Không tuân thủ cảnh báo này có thể gây ra điện giật hoặc hỏa hoạn.

Những cảnh báo quan trọng về sử dụng

- ☒ Trong trường hợp rò rỉ khí đốt (ví dụ như khí propane, khí LP, v.v...), quý vị phải lập tức thông gió cho toàn bộ khu vực và không chạm vào phích cắm. Không được chạm vào bếp hoặc dây điện.

- Không được sử dụng quạt thông gió.
- Chỉ một tia lửa nhỏ cũng có thể gây ra cháy nổ.

Thận trọng không để cửa bếp, hoặc bất kỳ bộ phận nào khác tiếp xúc với cơ thể trong khi nấu hoặc sau khi vừa nấu xong.

- Không tuân thủ cảnh báo này có thể gây bỏng.

LUÔN LUÔN sử dụng gang tay khi lấy thực phẩm ra khỏi lò để tránh bị phỏng.

Đứng cách xa lò với khoảng cách một cánh tay khi mở cửa lò.

Lý do: Khí nóng hoặc hơi nước thoát ra có thể gây bỏng.

Sử dụng vi sóng để hâm nóng thức uống có thể gây ra hiện tượng sôi trào chậm, vì vậy cần thận trọng khi mở lon hoặc hộp; Để phòng ngừa tình trạng này, LUÔN LUÔN chờ tối thiểu 20 giây sau khi lò tắt để nhiệt độ tự cân bằng. Khuấy đều trong khi hâm nóng, nếu cần, và LUÔN LUÔN khuấy sau khi hâm nóng. Trong trường hợp bị bỏng hơi nước, hãy làm theo các hướng dẫn SƠ CỨU sau đây:

- Ngâm vùng bị bỏng trong nước lạnh tối thiểu 10 phút.
- Đắp vùng bị bỏng bằng vải sạch và khô.
- Không được xoa kem, dầu hoặc nước rửa.
- Liên hệ với bác sĩ

Nếu dây cáp điện bị hư hỏng, việc thay thế phải được thực hiện bởi nhà sản xuất, trung tâm dịch vụ khách hàng đại diện hoặc những kỹ thuật viên có trình độ chuyên môn nhằm tránh xảy ra tai nạn.

Phải giám sát trẻ em để đảm bảo rằng trẻ không nghịch phá bếp.

Không nên hâm nóng trứng sống còn nguyên vỏ hoặc trứng đã luộc chín trong lò vi sóng vì điều này có thể gây nổ, ngay cả sau khi tắt lò.

CẢNH BÁO: Phải khuấy hoặc lắc đều và kiểm tra nhiệt độ sữa hoặc thực phẩm trong bình dành cho trẻ em trước khi cho trẻ ăn để tránh bị bỏng.

CẢNH BÁO: Chỉ cho phép trẻ em sử dụng lò mà không cần người lớn giám sát khi đã cung cấp những hướng dẫn đầy đủ để trẻ có thể sử dụng lò một cách an toàn và ý thức được những tai nạn có thể xảy ra nếu sử dụng không đúng cách.

Lò này không dành cho những người dị tật, thiếu năng trí tuệ hoặc thiếu kinh nghiệm và kiến thức sử dụng, trừ khi họ được giám sát và hướng dẫn.

CẢNH BÁO: Các bộ phận mà người sử dụng có thể tiếp xúc có thể sẽ bị nóng lên trong quá trình sử dụng. Giữ trẻ nhỏ cách xa lò để tránh bị bỏng.

CẢNH BÁO: Đảm bảo rằng bếp đã được tắt công tắc trước khi thay đèn nhằm tránh nguy cơ điện giật.



☐ Không được chạm vào phích cắm khi tay ướt.

- Điều này có thể gây điện giật.

Không được tắt bếp bằng cách rút phích cắm ra khỏi ổ điện trong khi bếp đang vận hành.

- Cắm phích cắm trở lại vào ổ điện trên tường có thể tạo ra một tia lửa điện và gây điện giật hoặc hỏa hoạn.

Giữ tắt cả bao bì đóng gói cách xa tầm với của trẻ em, vì những vật liệu này có thể nguy hiểm đối với trẻ nhỏ.

- Nếu trẻ trèo một chiếc túi hoặc bao bì lên đầu, nó có thể sẽ khiến trẻ bị ngạt thở.

Lò này không dành cho những người (bao gồm trẻ em) dị tật, thiếu năng trí tuệ hoặc thiếu kinh nghiệm và kiến thức sử dụng, trừ khi được người chịu trách nhiệm về sự an toàn của họ giám sát và hướng dẫn.

- Không tuân thủ cảnh báo này có thể gây ra điện giật, bỏng hoặc thương tổn.

Không bao giờ sử dụng bếp này cho bất kỳ mục đích nào khác ngoài nấu ăn.

- Không tuân thủ cảnh báo này có thể gây ra hỏa hoạn.

Mở nắp các hộp chứa kín (chai sữa, chai đựng thực phẩm trẻ em, v.v...) và dùng dao đục lỗ trên những thực phẩm như trứng còn nguyên vỏ và hạt để trước khi nấu.

- Không tuân thủ cảnh báo này có thể gây bỏng hoặc chấn thương do thực phẩm trào ra ngoài.

Không được chạm vào mặt bên trong của lò ngay sau khi nấu, vì nhiệt độ bên trong lò rất cao sau khi bị đun nóng trong một thời gian dài hoặc chỉ hâm nóng một lượng thực phẩm nhỏ.

- Không tuân thủ cảnh báo này có thể gây bỏng.

Không được dùng những đồ vật được mạ nhôm hoặc bằng kim loại (như hộp đựng, nĩa, v.v...) hoặc những hộp đựng được trang trí bằng vàng hoặc bạc.

- Điều này có thể tạo ra các tia lửa điện.

Không được nấu thực phẩm với nhiệt độ quá cao.

- Điều này có thể gây ra hỏa hoạn.

Không được hâm nóng thực phẩm được bọc bằng giấy như giấy báo hoặc tạp chí.

- Điều này có thể gây ra hỏa hoạn.

Không được sử dụng hoặc đặt các loại thuốc xịt hoặc đồ vật dễ cháy gần lò.

- Điều này có thể gây ra cháy nổ.

Không được mở cửa lò khi thực phẩm trong ngăn nấu đang cháy thành ngọn lửa.

- Nếu quý vị mở cửa lò, luồng khí ôxy từ bên ngoài tràn vào có thể sẽ gây ra hỏa hoạn.

Không được đốt ngón tay, những dị vật ngoại lai hoặc đồ vật bằng kim loại như kim gút hoặc kim khâu vào các khe cấp và thoát nước hoặc các lỗ thông hơi. Nếu dị vật ngoại lai lọt vào những lỗ này, hãy rút phích cắm ra khỏi ổ điện trên tường và liên hệ với nhà cung cấp sản phẩm hoặc trung tâm dịch vụ khách hàng gần nhất.

- Không tuân thủ cảnh báo này có thể gây điện giật hoặc thương tổn.

TUYỆT ĐỐI KHÔNG ĐƯỢC chứa thực phẩm đầy tới miệng hộp đựng và chọn các loại hộp đựng có miệng rộng hơn đáy để tránh thực phẩm lỏng tràn ra ngoài khi sôi. Bình cổ hẹp cũng có thể bị nổ nếu quá nóng.


TUYỆT ĐỐI KHÔNG ĐƯỢC hâm nóng bình sữa em bé khi đang đầy nắp, vì bình có thể nổ nếu quá nóng.

KHÔNG ĐƯỢC chạm vào bộ phận cấp nhiệt hoặc thành bên trong lò cho đến khi lò nguội hoàn toàn.


Không được nhúng cáp điện hoặc phích cắm vào nước, và giữ cáp điện cách xa các bề mặt nóng.

Không được vận hành bếp khi cáp điện hoặc phích cắm đã bị hỏng.

KHÔNG ĐƯỢC vận hành lò vi sóng khi không có thực phẩm bên trong. Điện sẽ được ngắt tự động để đảm bảo an toàn. Quý vị có thể vận hành lò bình thường sau khi để yên 30 phút. Tốt nhất là luôn luôn đặt một ly nước bên trong lò. Nước sẽ hấp thu năng lượng của vi sóng nếu lò vô tình được bật lên.

 **CẢNH BÁO:** Nếu cửa lò hoặc đệm cửa lò bị hư hỏng, phải ngừng vận hành lò cho đến khi lò được người có đủ trình độ chuyên môn sửa chữa.

CẢNH BÁO: Không được hâm nóng chất lỏng và các thực phẩm khác trong hộp đựng kín vì nguy cơ gây nổ.

 Nếu chất lỏng tràn vào lò, hãy lập tức ngắt điện và xin vui lòng liên hệ với trung tâm dịch vụ khách hàng gần nhất.

- Không tuân thủ cảnh báo này có thể gây ra điện giật hoặc hỏa hoạn.


Nếu bếp phát ra tiếng động lạ, bốc mùi khét hoặc bốc khói, hãy lập tức rút phích cắm ra khỏi ổ điện và liên hệ với trung tâm dịch vụ khách hàng gần nhất.

- Không tuân thủ cảnh báo này có thể gây ra điện giật hoặc hỏa hoạn.

 Không được cố tự sửa chữa, tháo rời, hoặc điều chỉnh bếp.

- Vì khung sản phẩm có thể nhiễm tĩnh điện cao thế nên có thể gây ra điện giật hoặc hỏa hoạn.
- Quý vị có thể bị phơi nhiễm trước các tia điện từ.
- Khi cần sửa chữa lò, vui lòng liên hệ với trung tâm dịch vụ khách hàng gần nhất.

CẢNH BÁO: Sẽ rất nguy hiểm nếu một người không có trình độ chuyên môn phù hợp sửa chữa hoặc bảo trì lò trong đó đòi hỏi tháo gỡ lớp vỏ bọc có chức năng bảo vệ tránh tiếp xúc với năng lượng vi sóng.


 Nếu bất kỳ dị vật ngoại lai nào như nước chảy vào bếp, hãy rút phích cắm ra khỏi ổ điện và liên hệ với trung tâm dịch vụ khách hàng gần nhất.

- Không tuân thủ cảnh báo này có thể gây ra điện giật hoặc hỏa hoạn.

Nếu phát hiện có khói bốc lên, hãy tắt công tắc hoặc rút phích cắm điện và giữ nắp lò đóng để dập tắt lửa;



KHUYẾN CÁO Những khuyến cáo về sử dụng

 Chỉ sử dụng những dụng cụ phù hợp với lò vi sóng, **KHÔNG ĐƯỢC** sử dụng hộp đựng bằng kim loại, bát đĩa có trang trí vàng hoặc bạc, xiên hoặc nĩa, v.v... Nhớ gỡ các dây kim loại cột miệng túi giấy hoặc túi nhựa.
Lý do: Hồ quang hoặc tia lửa điện phát sinh có thể làm hỏng lò.

Khi hâm nóng thực phẩm trong túi giấy hoặc túi nhựa, phải thường xuyên theo dõi lò vì nguy cơ phát hỏa;


Lượng thực phẩm nhỏ đòi hỏi thời gian nấu hoặc hâm nóng ngắn. Nếu sử dụng thời gian nấu bình thường, thực phẩm có thể quá nóng và phát hỏa.

Quý vị có thể nghe thấy tiếng lách cách trong khi vận hành lò (đặc biệt khi rà đông).

Lý do: Âm thanh này là bình thường khi công suất điện năng thay đổi.

TUYỆT ĐỐI KHÔNG ĐƯỢC cho phép trẻ nhỏ sử dụng hoặc nghịch lò vi sóng. Cũng không nên để trẻ đến gần lò vi sóng khi đang vận hành mà không giám sát. Không nên cất hoặc giấu những đồ vật hấp dẫn trẻ nhỏ phía trên lò.

Phải giám sát trẻ em để đảm bảo rằng trẻ không nghịch phá bếp.

 Thận trọng vì các loại thức uống hoặc thực phẩm có thể rất nóng sau khi hâm nóng.

- Nhất là khi cho trẻ nhỏ ăn, quý vị phải kiểm tra xem thực phẩm đã đủ nguội chưa.

Thận trọng khi hâm nóng các chất lỏng như nước hoặc các thức uống khác.

- Nhớ khuấy đều trong hoặc sau khi nấu.
- Tránh dùng hộp đựng hoặc bình chứa cổ hẹp dễ tuột tay đánh rơi.
- Chỉ lấy hộp đựng thực phẩm ra ít nhất 30 giây sau khi hâm nóng.
- Không tuân thủ khuyến cáo này có thể gây đổ tràn bất ngờ thực phẩm chứa bên trong hộp đựng và gây bỏng.



☐ Không được cầm nắm thực phẩm hoặc các bộ phận bên trong lò ngay sau khi nấu.

- Hãy sử dụng găng tay vì trên mặt bếp có thể rất nóng và quý vị có thể bị bỏng.
- Nếu quý vị đẩy một chiếc đĩa tráng men hoặc một chiếc chảo không dính chứa thực phẩm về phía trước, thực phẩm có thể sẽ sánh ra ngoài và gây bỏng.

Nếu trên bề mặt bếp xuất hiện vết nứt, hãy tắt công tắc điện ngay.

- Không tuân thủ khuyến cáo này có thể gây ra điện giật.

Không được dùng vật sắc nhọn cào trên lớp kính ở cửa lò.

- Hành động này có thể khiến lớp kính bị hư hỏng hoặc vỡ.

Không được đứng trên nóc lò hoặc đặt các đồ vật (như quần áo, tấm đệm lò, nệm đang cháy, bát đĩa, hóa chất, các đồ vật bằng kim loại, v.v...) lên trên lò.

- Những đồ vật như vải vóc có thể bị mắc kẹt vào cửa lò.
- Điều này có thể gây ra điện giật, hỏa hoạn, gây hư hỏng cho sản phẩm, hoặc gây thương tổn cho người.

Không được vận hành bếp khi tay đang ướt.

- Điều này có thể gây điện giật.

Không được xịt các hóa chất dễ bay hơi như thuốc diệt côn trùng lên bề mặt bếp.

- Ngoài việc độc hại cho con người, những hóa chất này còn có thể gây điện giật, hỏa hoạn hoặc gây hư hỏng cho bếp.

Không được tạo áp lực lớn hoặc gây va chạm mạnh lên cửa lò hoặc các bộ phận bên trong lò.

- Điều này có thể làm lò biến dạng hoặc gây thương tổn cho người do sự rò rỉ sóng điện.
- Treo đồ vật lên cửa lò có thể khiến lò bị rơi và gây thương tổn cho người.
- Nếu cửa lò bị hư hỏng, xin đừng sử dụng lò và liên hệ ngay với trung tâm dịch vụ khách hàng gần nhất.

Không được đặt bếp lên trên một đồ vật mỏng manh như chậu rửa bát hoặc các đồ vật bằng thủy tinh.

- Điều này có thể gây hư hỏng chậu rửa bát hoặc đồ vật thủy tinh.

Chỉ sử dụng lò sau khi đã đóng cửa.

- Sử dụng lò khi lò đang bị nhiễm bẩn bởi các dị vật ngoại lai như thực phẩm thừa có thể sẽ làm hỏng lò.

Thận trọng khi gỡ lớp giấy hoặc màng bọc thực phẩm vừa lấy ra khỏi bếp.

- Nếu thực phẩm còn quá nóng, hơi nước nóng có thể đột ngột thoát ra khi quý vị gỡ lớp giấy hoặc màng bọc và có thể khiến quý vị bị bỏng.

Không được rút phích cắm điện của bếp bằng cách kéo phần dây, luôn luôn nắm chặt phích cắm và rút thẳng ra khỏi ổ điện.

- Phần dây điện bị hư hỏng có thể gây đoản mạch, hỏa hoạn và/hoặc điện giật.

Không được để mặt hoặc cơ thể gần lò khi đang nấu hoặc khi vừa mở cửa lò sau khi nấu.

- Lưu ý không để trẻ em đến gần lò.
- Không tuân thủ khuyến cáo này có thể gây bỏng do nhiệt.

Không được đặt thực phẩm hoặc những đồ vật nặng trên cửa lò khi mở cửa.

- Thực phẩm hoặc đồ vật có thể rơi và có thể gây bỏng hoặc thương tổn.

Không được làm nguội đột ngột cửa lò, phần bên trong lò, hoặc món ăn bằng cách dội nước lên lò trong khi nấu hoặc sau khi vừa nấu xong.

- Điều này có thể gây hư hỏng cho lò. Hơi nước hoặc các tia nước nóng bắn ra có thể gây bỏng hoặc thương tổn.

Bếp không được dự định vận hành bằng các phương tiện như bộ định giờ ngoại vi hoặc hệ thống điều khiển từ xa rời.

**CẢNH BÁO Những cảnh báo quan trọng khi vệ sinh bếp**

Không được vệ sinh bếp bằng cách phun nước trực tiếp lên bếp.
Không được sử dụng các dung dịch benzen, chất tẩy hoặc cồn để vệ sinh bếp.

- Điều này có thể làm bạc màu, biến dạng, hư hỏng, gây điện giật hoặc hỏa hoạn.

Trước khi vệ sinh hoặc tiến hành bảo trì lò, nhớ rút phích cắm điện của lò ra khỏi ổ cắm điện trên tường và lau sạch thực phẩm thừa bám trên cửa và ngăn nấu.

- Không tuân thủ cảnh báo này có thể gây ra điện giật hoặc hỏa hoạn.

Không được sử dụng giẻ lau thô ráp hoặc bụi nhùi kim loại để lau chùi cửa kính của lò vì chúng có thể làm trầy xước bề mặt, có thể dẫn đến vỡ kính.

Không được sử dụng lò vi sóng để sấy khô giấy tờ hoặc quần áo.

Vì sự an toàn của quý vị, không được sử dụng các dụng cụ làm vệ sinh bằng nước cao áp hoặc hơi nước.

Trong khi vệ sinh lò, các bề mặt có thể nóng hơn bình thường và không nên cho trẻ em đến gần. (chỉ dành cho mẫu làm vệ sinh được)

Mọi trường hợp chảy tràn phải được loại bỏ trước khi vệ sinh và phải xác định rõ những dụng cụ nào có thể để lại bên trong lò trong khi vệ sinh. (chỉ dành cho mẫu làm vệ sinh được)

**KHUYẾN CÁO Các khuyến cáo khi vệ sinh bếp**

Phải thường xuyên vệ sinh lò và lau sạch các mảng bám thực phẩm bên trong lò.

Không giữ lò sạch sẽ có thể dẫn đến biến chất bề mặt có thể ảnh hưởng tiêu cực đến tuổi thọ của lò và còn có thể gây nguy hiểm.



Thận trọng khi vệ sinh bếp (bên ngoài/bên trong) để không gây thương tổn cho bản thân.

- Quý vị có thể bị thương vì những cạnh sắc của bếp.

Không được vệ sinh bếp bằng dụng cụ vệ sinh hơi nước.

- Điều này có thể gây ra hiện tượng ăn mòn.

CẦN TRỌNG ĐỂ TRÁNH TIẾP XÚC VỚI NĂNG LƯỢNG VI SÓNG QUÁ MỨC

Không tuân thủ các lưu ý an toàn sau đây có thể khiến quý vị bị phơi nhiễm trước năng lượng vi sóng có hại.

- (a) Trong mọi trường hợp, không được tìm cách nấu khi cửa lò đang mở, phá khóa an toàn (chốt cửa) hoặc nhét bất cứ vật gì vào các lỗ khóa an toàn.
- (b) Không được đặt bất kỳ vật gì giữa cửa lò và mặt đệm phía trước, không để cho thực phẩm hay rác lau chùi bám vào vành đệm cửa. Luôn lau chùi sạch sẽ cửa lò và đệm cửa lò bằng khăn ướt trước sau đó lau lại bằng khăn mềm khô.
- (c) Nếu lò bị hư hỏng, không được sử dụng lò cho đến khi được nhân viên kỹ thuật đủ trình độ chuyên môn do nhà sản xuất huấn luyện sửa chữa. Điều cực kỳ quan trọng là phải đảm bảo cửa lò luôn đóng kín và không được làm hư hỏng các bộ phận:
 - (1) Cửa (vành)
 - (2) Bản lề cửa (gãy hoặc lỏng)
 - (3) Đệm cửa và bề mặt tiếp xúc
- (d) Người không chuyên môn không được sửa chữa hoặc điều chỉnh lò ngoại trừ nhân viên kỹ thuật đã được nhà sản xuất huấn luyện.

 
Sản phẩm này là một thiết bị ISM nhóm 2 lớp B. Định nghĩa của nhóm 2 bao gồm tất cả các thiết bị ISM có phát sinh năng lượng tần số vô tuyến và/hoặc sử dụng năng lượng này dưới hình thức tia bức xạ điện từ dùng trong xử lý vật liệu, thiết bị EDM và hàn hồ quang. Lớp B là những thiết bị phù hợp để sử dụng theo các tiêu chuẩn dân dụng và các tiêu chuẩn nối trực tiếp với lưới điện hạ thế cung cấp năng lượng cho các tòa nhà vì mục đích dân dụng.




LẮP ĐẶT LÒ VI SÓNG

Đặt lò trên một bề mặt bằng phẳng cao hơn sàn nhà 85 cm. Bề mặt đó phải đủ vững chắc để chịu được trọng lượng của lò.

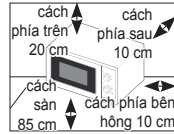

 1. Khi lắp đặt lò, đảm bảo đủ thông hơi cho lò bằng cách chừa ít nhất 10 cm (4 inch) phía sau và hai bên lò và 20 cm (8 inch) phía trên lò.

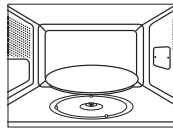

2. Lấy tất cả những miếng đệm bên trong lò khi đóng gói ra khỏi lò.
Lắp vòng xoay và đĩa xoay.
Kiểm tra để xác định đĩa xoay có thể xoay tự do.



3. Đặt lò sao cho việc cắm phích điện được dễ dàng.

-  Nếu cáp điện của lò bị hư hỏng, việc thay thế một sợi cáp chuyên dụng mới phải được thực hiện bởi nhà sản xuất hoặc đại lý dịch vụ của nhà sản xuất.
Vi sự an toàn của quý vị, hãy cắm cáp điện vào một ổ điện xoay chiều 3 chân, 230 V, 50 Hz đã được nối đất. Nếu cáp điện của thiết bị này bị hư hỏng, nó phải được thay thế mới bằng một sợi cáp chuyên dụng.
-  Không lắp đặt lò trong không gian quá nóng hoặc ẩm thấp như quá gần lò nấu truyền thống hay lò sưởi. Phải tuân thủ quy định về nguồn cấp điện và cáp nối dài nguồn phải cùng tiêu chuẩn với cáp được cung cấp kèm theo lò. Lau sạch bên trong lò và cửa lò bằng khăn ướt trước khi sử dụng lò lần đầu.

LÀM GÌ KHI NGHI NGỜ HOẶC CHẮC CHẮN LÒ VI SÓNG BỊ HƯ HỎNG

Nếu quý vị gặp các vấn đề dưới đây, hãy cố gắng tự giải quyết để tiết kiệm được thời gian.

Điều này là bình thường.

- Ngưng tụ hơi nước trong lò.
- Không khí đối lưu quanh cửa và vỏ ngoài của lò.
- Đèn sáng quanh cửa và vỏ ngoài của lò.
- Hơi nước thoát ra từ cửa lò hoặc lò thông hơi.

Lò không khởi động khi bạn đã xoay núm THỜI LƯỢNG (TIMER).

- Cửa lò đã đóng hoàn toàn hay chưa?

Thực phẩm hoàn toàn không được nấu.

- Bạn đã cài đặt thời lượng đúng chưa?
- Cửa lò đã đóng chưa?
- Mạng điện đã quá tải và cháy cầu chì hay nhảy cầu dao?

Thực phẩm được nấu quá chín hoặc quá sống.


- Quý vị đã cài đặt đủ thời gian nấu cho loại thực phẩm đó hay chưa?
- Mức công suất lựa chọn đã phù hợp hay chưa?

Có tia lửa điện hay tiếng nứt tách bên trong lò (hồ quang điện)

- Quý vị có sử dụng đĩa được trang trí bằng kim loại không?
- Có phải quý vị đã để quên muỗng nĩa hoặc một dụng cụ khác bằng kim loại bên trong lò?
- Có phải giấy bọc thực phẩm bằng nhôm được đặt quá gần thành bên trong lò hay không?

Lò gây nhiễu sóng cho máy cát sét hoặc tivi.

- Có thể có nhiễu tương đối nhỏ cho tivi hoặc máy cát sét khi lò hoạt động. Điều này là bình thường. Để khắc phục, cần đặt lò xa tivi, radio và ăng ten.

 
-  Nếu những hướng dẫn trên đây không giúp quý vị khắc phục được hư hỏng, hãy liên hệ người bên hoặc dịch vụ hậu mãi SAMSUNG.

NẤU NƯỚNG/HÂM NÓNG

Quy trình sau giải thích cách nấu hoặc hâm nóng thực phẩm.
LUÔN LUÔN kiểm tra thông số cài đặt trước khi rời lò cho lò tự nấu.
Trước hết, đặt thực phẩm vào giữa đĩa xoay và đóng cửa lò.


1. Cài đặt mức công suất tối đa bằng cách xoay núm

**ĐIỀU KHIỂN CÔNG SUẤT NẤU
(COOKING POWER CONTROL).**
(CÔNG SUẤT TỐI ĐA: 800 W)



2. Chọn thời gian nấu bằng cách xoay núm
THỜI LƯỢNG (TIMER).

 Kết quả: Đèn lò sẽ sáng khi đĩa xoay bắt đầu xoay.



- ☒ **Không bao giờ** được vận hành lò khi lò để trống.
- ☒ Bạn có thể thay đổi mức công suất trong khi nấu bằng cách xoay núm **ĐIỀU KHIỂN CÔNG SUẤT NẤU (COOKING POWER CONTROL).**

MỨC CÔNG SUẤT

Quý vị có thể chọn một trong các mức công suất sau.

Mức công suất	Công suất
CAO	800 W
HÂM NÓNG	700 W
CAO VỪA	600 W
VỪA	450 W
THẤP VỪA	300 W
RÃ ĐỒNG (hâm) (giữ)	180 W
THẤP	100 W

 
- ☒ Nếu quý vị chọn mức công suất cao, thời gian nấu sẽ giảm xuống.
- ☒ Nếu quý vị chọn mức công suất thấp, thời gian nấu sẽ tăng lên.

NGỪNG NẤU


Quý vị có thể dừng nấu bất kỳ lúc nào để kiểm tra thực phẩm.

1. Để tắt tạm thời,
hãy mở cửa.

Kết quả: Dừng nấu. Đóng cửa lò lại để tiếp tục.



 
2. Để dừng hoàn toàn;
Xoay núm **THỜI LƯỢNG (TIMER)** về "0".





ĐIỀU CHỈNH THỜI GIAN NẤU

 
Điều chỉnh thời gian nấu còn lại bằng cách xoay núm **THỜI LƯỢNG (TIMER)**.



RÃ ĐÔNG THỰC PHẨM THỦ CÔNG


Chức năng Rã đông cho phép bạn rã đông thịt, thịt gia cầm, cá. Trước hết, đặt thực phẩm đông lạnh vào giữa đĩa xoay và đóng cửa lò.

 1. Xoay núm **ĐIỀU KHIỂN CÔNG SUẤT NẤU (COOKING POWER CONTROL)** sang ký hiệu **rã đông (Defrost)** ^(hình 1).



2. Xoay núm **THỜI LƯỢNG (TIMER)** để chọn thời gian nấu phù hợp.

 Kết quả: Quá trình rã đông bắt đầu.





 Chỉ sử dụng vật chứa an toàn với vi sóng.

SỬ DỤNG CHỨC NĂNG HÂM NÓNG NHANH

Đầu tiên, hãy đặt thức ăn ở giữa đĩa xoay và đóng cửa lò lại.

  1. Xoay núm **ĐIỀU KHIỂN CÔNG SUẤT NẤU (COOKING POWER CONTROL)** đến mức công suất tối đa.
2. Xoay núm **THỜI LƯỢNG (TIMER)** để chọn chức năng Hâm nóng nhanh (Reheat). (thức uống hoặc súp/nước sốt, rau cải tươi).



 Chỉ sử dụng vật chứa an toàn với vi sóng.

CÀI ĐẶT THÔNG SỐ HÂM NÓNG NHANH

Đây là một số mẹo và khuyến cáo được áp dụng khi nấu hoặc hâm nóng thức ăn ở Chức năng hâm nóng nhanh và Chức năng nấu

Ký hiệu	Thực phẩm	Lượng dùng	Thời gian nấu	Thời gian chờ
Drink Đồ uống	Thức uống	150 ml	1 phút 10 giây	1-2 phút
Soup/Sauce Canh/ Súp	Súp/nước sốt (giữ lạnh)	200-250 g	3 phút	2-3 phút
Fresh Vegetables Rau quả tươi	Rau cải tươi	300-350 g	6 phút 40 giây	2-3 phút



HƯỚNG DẪN VỀ DỤNG CỤ NẤU

Để nấu thực phẩm trong lò vi sóng, vi sóng có thể tác động vào thực phẩm, mà không bị phản xạ hoặc hấp thu bởi chiếc đĩa đang dùng.

Cần cẩn thận khi chọn dụng cụ nấu. Nếu dụng cụ nấu được ghi là an toàn cho lò vi sóng, quý vị không cần phải lo lắng.

Bảng sau đây liệt kê nhiều loại dụng cụ nấu và đồng thời nêu rõ thời gian và cách thức sử dụng chúng trong một lò vi sóng.

Dụng cụ nấu	An toàn cho lò vi sóng	Ghi chú
Giấy nhôm	✓ ✗	Có thể được sử dụng với số lượng nhỏ để bảo vệ thực phẩm không nấu quá chín. Hồ quang xuất hiện nếu giấy nhôm quá gần vách lò hoặc nếu dùng quá nhiều giấy nhôm.
Đĩa nướng	✓	Không nên để nóng trước quá 8 phút.
Đồ sứ và đồ bằng đất nung	✓	Sành, gốm, đồ đất có men và đồ sứ làm bằng đất sét trộn với tro xương thường thích hợp, miễn là không có trang trí hoa văn kim loại.
Đĩa polyester loại dùng rồi bỏ	✓	Một số thực phẩm đông lạnh được đóng gói trong các đĩa như vậy.
Bao bì thực phẩm nhanh		
• Ly tách bằng Polystyrene	✓	Có thể được sử dụng để hâm thực phẩm. Nấu quá lâu có thể làm cho polystyrene chảy ra.
• Túi giấy hoặc bọc giấy báo	✗	Có thể bắt lửa.
• Giấy tái chế hoặc trang trí kim loại	✗	Có thể làm net lửa.
Vật dụng thủy tinh		
• Đồ gốm chịu nhiệt	✓	Có thể sử dụng, miễn là không có trang trí bằng kim loại.

Dụng cụ nấu	An toàn cho lò vi sóng	Ghi chú
• Vật dụng thủy tinh tinh xảo	✓	Có thể dùng để hâm thực phẩm hoặc chất lỏng. Thủy tinh mỏng có thể nứt vỡ khi bị đun nóng đột ngột.
• Bình thủy tinh	✓	Phải tháo nắp. Chỉ thích hợp cho hâm nóng.
Kim loại		
• Đĩa	✗	Có thể làm net lửa hoặc gây hỏa hoạn.
• Túi cột miệng dùng cho tủ lạnh	✗	
Giấy		
• Khay, ly tách, khăn ăn và giấy thấm	✓	Dùng với thời gian nấu và hâm nóng ngắn. Vẫn hấp thu độ ẩm dư thừa.
• Giấy tái chế	✗	Có thể làm net lửa.
Nhựa		
• Hộp chứa	✓	Đặc biệt nếu đó là nhựa chống nhiệt. Vài loại nhựa khác có thể biến dạng hoặc mất màu ở nhiệt độ cao. Không được dùng nhựa melamine.
• Màng bọc thực phẩm	✓	Có thể được sử dụng để giữ độ ẩm. Không được cho chạm vào thực phẩm. Cần thận khi gỡ màng bọc vì hơi nóng sẽ thoát ra.
• Túi dùng cho tủ lạnh	✓ ✗	Chỉ có thể dùng nếu được chứng nhận chịu sôi hoặc dùng được cho lò. Không nên bịt kín hơi. Chọc thủng bằng nĩa, nếu cần.
Giấy sáp và giấy chống dầu	✓	Có thể được sử dụng để giữ độ ẩm và tránh văng tung tóe.

✓ : Khuyến nghị

✓ ✗ : Cẩn thận khi sử dụng


✗ : Không an toàn




VỆ SINH LÒ VI SÓNG


Các bộ phận sau đây của lò vi sóng cần được làm sạch thường xuyên để tránh dầu mỡ và các mẫu thực phẩm tích tụ lại:

- Bề mặt trong và ngoài
- Cửa lò và đệm cửa lò
- Đĩa xoay và vòng xoay

 **LUÔN LUÔN** đảm bảo đệm cửa lò sạch sẽ và cửa được đóng đúng cách.

 Không đảm bảo lò sạch thường xuyên có thể dẫn đến rỉ sét bề mặt, ảnh hưởng đến tuổi thọ của lò và có thể gây nguy hiểm.

1. Làm sạch mặt ngoài lò bằng vải mềm, nước ấm pha xà bông. Lau nhẹ và làm khô ráo.
2. Loại bỏ bất kỳ vết bẩn nào ở mặt trong lò hay trên vòng xoay bằng vải có xà bông. Lau nhẹ và làm khô ráo.
3. Để loại bỏ các mẫu thực phẩm đã hóa cứng và khử mùi cho lò, hãy đặt một ly nước chanh pha loãng vào đĩa xoay và nấu trong vòng 10 phút ở công suất tối đa.
4. Rửa đĩa an toàn với máy rửa chén mỗi khi cần thiết.

 **KHÔNG ĐƯỢC** làm đổ nước vào các lỗ thông hơi. **KHÔNG ĐƯỢC** sử dụng bất kỳ thiết bị tẩy rửa hay dung môi hóa học nào. Đặc biệt chú ý khi làm vệ sinh đệm cửa lò để đảm bảo không còn các dị vật rất nhỏ bám trên đệm cửa:

- Tích tụ
- Ngăn cản cửa lò đóng đúng cách

CÁC THÔNG SỐ KỸ THUẬT

SAMSUNG luôn cố gắng cải tiến thiết bị của mình. Do đó các thông số mẫu mã cũng như hướng dẫn sử dụng sẽ được thay đổi mà không được thông báo.

Mẫu lò	MW71B, ME71B
Nguồn điện	230 V ~ 50 Hz
Mức tiêu thụ năng lượng Vi sóng	1150 W
Công suất ra	100 W / 800 W (IEC-705)
Tần số hoạt động	2450 MHz
Magnetron	OM75S(31)
Phương pháp làm mát	Động cơ quạt làm mát
Kích thước (rộng x cao x sâu) Bên ngoài Khoang lò	489 x 275 x 320 mm 330 x 211 x 309 mm
Thể tích	20 lít
Trọng lượng Tĩnh	khoảng 10,5 kg (MW71B) khoảng 11 kg (ME71B)



BẠN CÓ THẮC MẮC HOẶC Ý KIẾN?

QUỐC GIA	GỌI ĐIỆN THOẠI	HOẶC TRUY CẬP TRANG WEB CỦA CHÚNG TÔI TẠI
AUSTRALIA	1300-362-603	www.samsung.com
NEW ZEALAND	0800-SAMSUNG (0800-726-786)	
CHINA	400-810-5858	
HONG KONG	(852) 3698-4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	3030-8282 1800-1100 11 1800-3000-8282 1800-266-8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	
JAPAN	0120-327-527	
MALAYSIA	1800-88-9999	
PHILIPPINES	1-800-10-SAMSUNG (726-7864) for PLDT 1-800-3-SAMSUNG (726-7864) for Digitel 1-800-8-SAMSUNG (726-7864) for Globe 02-5805777	
SINGAPORE	1800-SAMSUNG (726-7864)	
THAILAND	1800-29-3232 02-689-3232	
TAWAN	0800-329-999 0266-026-066	
VIETNAM	1-800-588-889	

Mã số: DE68-03801G-02





MW71B
ME71B

Microwave Oven

Owner's Instructions & Cooking Guide

imagine the possibilities

Thank you for purchasing this Samsung product.
Please register your product at

www.samsung.com/register

**Planet
First** **100%
Recycled Paper**

This manual is made with 100% recycled paper.






CONTENTS

Oven	2
Accessories	3
Control panel	3
Using this instruction booklet	4
Safety information	4
Installing your microwave oven	11
What to do if you are in doubt or have a problem	11
Cooking/Reheating	12
Power levels	12
Stopping the cooking	12
Adjusting the cooking time	13
Manual defrosting food	13
Using the instant reheat feature	13
Instant reheat settings	13
Cookware guide	14
Cleaning your microwave oven	15
Technical specifications	15

 OVEN

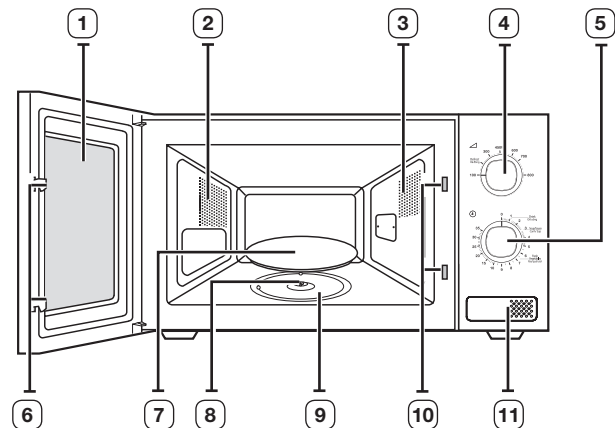

- | | |
|----------------------------------------|----------------------------|
| 1. DOOR | 7. TURNTABLE |
| 2. VENTILATION HOLES | 8. COUPLER |
| 3. LIGHT | 9. ROLLER RING |
| 4. VARIABLE COOKING POWER CONTROL KNOB | 10. SAFETY INTERLOCK HOLES |
| 5. TIMER KNOB | 11. OPEN DOOR PUSH BUTTON |
| 6. DOOR LATCHES | |

 


ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

1. **Coupler**, already placed over the motor shaft in the base of the oven.

Purpose : The coupler rotates the turntable.




2. **Roller ring**, to be placed in the centre of the oven.

Purpose : The roller ring supports the turntable.




3. **Turntable**, to be placed on the roller ring with the centre fitting to the coupler.

 Purpose : The turntable serves as the main cooking surface; it can be easily removed for cleaning.



 **DO NOT** operate the microwave oven without the roller ring and turntable.

 CONTROL PANEL

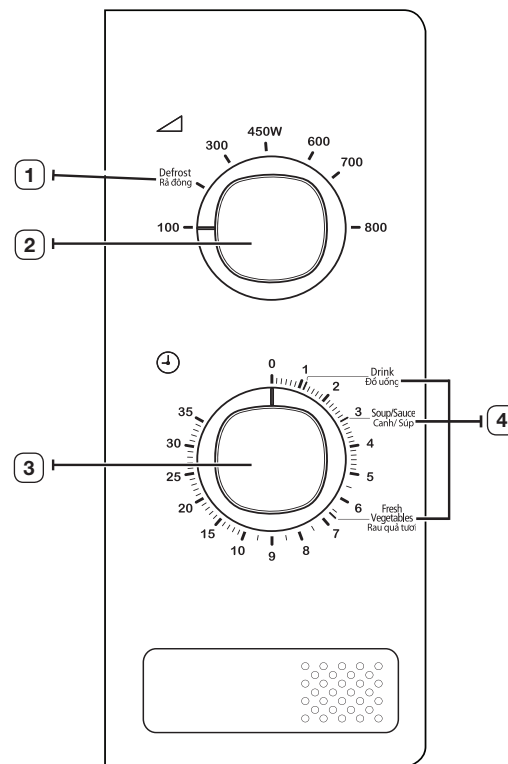

1. DEFROST
2. VARIABLE COOKING POWER CONTROL KNOB
3. TIMER KNOB
4. INSTANT REHEAT

USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain much valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips













At the front of the booklet you will find illustrations of the oven, and more importantly the control panel, so that you can find the buttons more easily.

SAFETY INFORMATION

- Before operating the appliance, please read this manual thoroughly and retain it at a safe place near the appliance for your future reference.
- Use this appliance only for its intended purpose as described in this instruction manual. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

Important safety symbols and precautions.

The following symbols are used in the text of this Owner's Manual:

 WARNING	Hazards or unsafe practices that may result in severe personal injury or death.
 CAUTION	Hazards or unsafe practices that may result in minor personal injury or property damage.
 CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your microwave oven, follow these basic safety precaution.
	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
	Note
	Important

**WARNING** Severe warning signs for installation

- ★ The installation of this appliance must be performed by a qualified microwave service technician trained by the manufacturer. Please see the section “Installing your Microwave Oven”.

Plug the power cord into the proper wall socket or higher and use the socket for this appliance only. Plug the power plug into the wall socket firmly. In addition, do not use an extension cord.

- Failure to do so and sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Do not use an electric transformer. It may result in electric shock or fire.

The installation of this appliance must be performed by a qualified technician or service company.

- Failing to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

- ☐ Do not install this appliance near a heater, inflammable material. Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops). Do not install this appliance in a location where gas may leak.
- This may result in electric shock or fire.

The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.

- ⚡ This appliance must be properly grounded. Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.
- This may result in electric shock, fire, an explosion, or problems with the product.
 - Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

**CAUTION** Caution signs for installation

- ★ This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, noise, or problems with the product.

Install the appliance while maintaining the proper distance from the wall.

- Failure to do so may result in fire due to overheating.

The minimum height of free space necessary above the top surface of the oven.

**WARNING** Severe warning signs for electric

- ★ Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

- ☐ Plug the power plug into the wall socket firmly. Do not use a damaged power plug, damaged power cord or loose wall socket.
- This may result in electric shock or fire.

- ❑ Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.
Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

- 🔧 When the appliance or the cord is damaged, contact your nearest service centre.



CAUTION Caution signs for electric

- 🔌 Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.



WARNING Severe warning signs for using

- ★ In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Take care that the door, or any of the other parts do not come into contact with the body while cooking or just after cooking.

- Failure to do so may result in burns.

ALWAYS use oven gloves when removing a dish from the oven to avoid unintentional burn.

Stand at arms length from the oven when opening the door.

Reason : The hot air or steam released may cause scalding.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions:

- Immerse the scalded area in cold water for at least 10 minutes.
- Cover with a clean, dry dressing.
- Do not apply any creams, oils or lotions.
- Contact a doctor

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Children should be supervised to ensure that they do not play with the appliance.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.

WARNING : The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

WARNING : Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

WARNING : Accessible parts may become hot during use. To avoid burns young children should be kept away.

WARNING : Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.



 Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Failing to do so may result in electric shock, burns or injury.

Never use this appliance for purposes other than cooking.

- Failure to do so may result in fire.

Open sealed containers (baby bottles, milk bottles, etc.) and make a hole in food items such as shells or nuts (eggs, chestnuts, etc) with a knife, before cooking them.

- Failure to do so may result in burns or injury due to the item bursting.

Do not touch the inside of the appliance immediately after cooking, because the inside of the appliance is hot after being heated for a long time or heating a small amount of food.

- Failure to do so may result in burns.

Do not use aluminium foil, metal objects (such as containers, forks, etc.) or containers with golden or silver trims.

- This may result in sparks or fire.

Do not over-heat food.

- This may result in fire.

Do not heat food wrapped in paper such as magazines or newspaper.

- This may result in fire.

Do not use or place inflammable sprays or objects near the oven.

- This may result in fire or an explosion.

Do not open the door when the food in the cooking compartment is burning.

- If you open the door, an inflow of oxygen occurs and this may result in fire.

Do not insert fingers, foreign substances or metal objects such as pins or needles into the inlet, outlet and holes. If foreign substances are inserted into any of these holes, unplug the power plug from the wall socket and contact your product provider or nearest service centre.

- Failure to do so may result in electric shock or injury.

NEVER fill the container to the top and choose a container that is wider at the top than at the bottom to prevent the liquid from boiling over. Bottles with narrow necks may also explode if overheated.

NEVER heat a baby's bottle with the teat on, as the bottle may explode if overheated.


DO NOT touch heating elements or interior oven walls until the oven has cooled down.

Do not immerse the power cable or plug in water and keep the power cable away from heated surfaces.


Do not operate this appliance if it has a damaged power cable or plug.

DO NOT operate the microwave oven when it is empty. The power will be cut off automatically for safety. You can operate normally after letting it stand for over 30 minutes. It is best to leave a glass of water inside the oven at all times. The water will absorb the microwave energy if the oven accidentally started.



-  **WARNING :** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING : Liquids and other foods must not be heated in sealed containers since they are liable to explode.

-  If the appliance is flooded cut the power immediately and please contact your nearest service centre.

- Failure to do so may result in electric shock or fire.


If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

-  Do not attempt to repair, disassemble, or modify the appliance yourself.

- Since a high voltage current enters the product chassis, it may result in electric shock or fire.
- You may be exposed to electromagnetic waves.
- When repairing the appliance is required, contact your nearest service centre.

WARNING : It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.


-  If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;



CAUTION Caution signs for using

-  Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags.
Reason : Electric arcing or sparking may occur and may damage the oven.

When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;


Small amounts of food require shorter cooking or heating time. If normal times are allowed they may overheat and burn.

You may notice a Clicking sound during operation (especially when the oven is defrosting).


Reason : This sound is normal when the electrical power output is changing.

Young children should NEVER be allowed to use or play with the microwave oven. Nor should they be left unattended near the microwave oven when it is in use. Items of interest to children should not be stored or hidden just above the oven.

Children should be supervised to ensure that they do not play with the appliance.

-  Take care as beverages or food may be very hot after heating.
- Especially when feeding a child, check that it has cooled sufficiently. Take care when heating liquids such as water or other beverages.
 - Make sure to stir during or after cooking.
 - Avoid using a slippery container with a narrow neck.
 - Remove the container at least 30 seconds after heating.
 - Failing to do so may result in an abrupt overflow of the contents and cause burns.



 Do not hold food or any part thereof during or immediately after cooking.

- Use cooking gloves because it may be very hot and you could burn yourself.
- If you pull the ceramic dish or well-being multi-purpose pan forwards, food may spill and this may result in burns.

When the surface is cracked, turn the power switch of the appliance off.

- Failure to do so may result in electric shock.

Do not scratch the glass of the oven door with a sharp object.

- This may result in the glass being damaged or broken.

Do not stand on top of the appliance or place objects (such as laundry, oven cover, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- Items, such as a cloth, may be caught in the door.
- This may result in electric shock, fire, problems with the product, or injury.

Do not operate the appliance with wet hands.

- This may result in electric shock.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not apply excessive pressure or impact to the door or to the inside of the appliance.

- This may result in deformation to the product or injury due to electric wave leakage.
- Hanging onto the door may result in the product falling and causing injury.
- If the door is damaged, do not use the appliance and contact your nearest service centre.

Do not place the appliance over a fragile object such as a sink or glass object.

- This may result in damage to the sink or glass object.

Use the appliance only after closing the door.

- If you use the appliance when it is contaminated by foreign substances such as food waste, it may result in problems with the appliance.

Take care when removing the wrapping from food that has just been taken out of the appliance.

- If the food is hot, hot steam may be emitted abruptly when removing the wrapping and you may burn yourself.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock.

Do not put your face or body close to the appliance while cooking or when opening the door just after cooking.

- Take care that children do not come close to the appliance.
- Failure to do so may result in burns from the heat.

Do not place food or heavy objects over the door when opening the door.


- The food or object may fall and this may result in burns or injury.

Do not abruptly cool the door, the inside of the appliance, or the dish by pouring water over it during or just after cooking.

- This may result in damage to the appliance. The steam or water spray may result in burns or injury.

Appliances are not intended to be operated by means of an external timer or separate remote-control system.

**WARNING** Severe warning signs for cleaning

-  Do not clean the appliance by spraying water directly onto it.
Do not use benzene, thinner or alcohol to clean the appliance.
- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket and remove food waste from the door and cooking compartment.

- Failure to do so may result in electric shock or fire.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.



Do not use your microwave oven to dry papers or clothes.

For your safety, do not use high-pressure water cleaners or steam jet cleaners.

During cleaning conditions the surfaces may get hotter than usual and children should be kept away. (cleaning model only)

Excess spillage must be removed before cleaning and shall specify which utensils can be left in the oven during cleaning. (cleaning model only)

**CAUTION** Caution signs for cleaning

-  The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
-  Take care not to hurt yourself when cleaning the appliance (external/internal).
- You may hurt yourself on the sharp edges of the appliance.
- Do not clean the appliance with a steam cleaner.
- This may result in corrosion.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- (a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- (b) Do not place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- (c) Do not operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
 - (1) Door (bent)
 - (2) Door hinges (broken or loose)
 - (3) door seals and sealing surfaces
- (d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

 
This product is a Group 2 Class B ISM equipment. The definition of group 2 which contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and EDM and arc welding equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.




INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safely bear the weight of the oven.

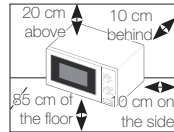

 1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.

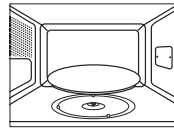

2. Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.



3. This microwave oven has to be positioned so that plug is accessible.

-  If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent. For your personal safety, plug the cable into a 3-pin, 230 Volt, 50 Hz, AC earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable.
-  Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

WHAT TO DO IF YOU ARE IN DOUBT OR HAVE A PROBLEM

If you have any of the problems listed below try the solutions given.

This is normal.

- Condensation inside the oven.
- Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

The oven does not start when you turn the **TIMER** knob.

- Is the door completely closed?

The food is not cooked at all.

- Have you set the timer correctly?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

The food is either overcooked or undercooked.


- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

Sparkling and cracking occur inside the oven (arcing).

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

The oven causes interference with radios or televisions.

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.

 
-  If the above guidelines do not enable you to solve the problem, contact your local dealer or SAMSUNG after-sales service.



COOKING/REHEATING


The following procedure explains how to cook or reheat food.
ALWAYS check your cooking settings before leaving the oven unattended.
First, place the food in the centre of the turntable and close the door.

1. Set the power level to maximum by turning **COOKING POWER CONTROL** knob.
(MAXIMUM POWER : 800 W)



2. Set the time by turning **TIMER** knob.

 Result : The oven light comes on and the turntable starts rotating.



- ☞ **Never** switch the microwave oven on when it is empty.
- ☞ You can change the power level during cooking by turning the **COOKING POWER CONTROL** knob.

POWER LEVELS

You can choose among the power levels below.

Power level	Output
HIGH	800 W
REHEAT	700 W
MEDIUM HIGH	600 W
MEDIUM	450 W
MEDIUM LOW	300 W
DEFROST <small>(defrost)</small> <small>(b.d.fg)</small>	180 W
LOW	100 W

 
- ☞ If you select higher power level, the cooking time must be decreased.
- ☞ If you select lower power level, the cooking time must be increased.

STOPPING THE COOKING


You can stop cooking at any time to check the food.

1. To stop temporarily;
Open the door.

Result : Cooking stops. To resume cooking, close the door.



 
2. To stop completely;
Turn the **TIMER** knob to "0".





ADJUSTING THE COOKING TIME

 
Adjust the remaining cooking time by rotating the **TIMER** knob.



MANUAL DEFROSTING FOOD


The Defrost feature enables you to defrost meat, poultry, fish. First, place the frozen food in the centre of the turntable and close the door.

 1. Turn the **COOKING POWER CONTROL** knob to the **Defrost** (Defrost) symbol.



2. Turn the **TIMER** knob to select the appropriate time.

 Result : Defrosting begins.




 Use only recipients that are microwave-safe.


USING THE INSTANT REHEAT FEATURE


First, place the food in the center of the turntable and close the door.

 1. Turn the **COOKING POWER CONTROL** knob to Max Power.



 2. Turn the **TIMER** knob to select Instant Reheat. (drinks or soup/sauce, fresh vegetables).



 Use only recipients that are microwave-safe.

INSTANT REHEAT SETTINGS

Here are a few tips and recommendations to be followed when cooking or reheating food with the Instant Reheat and Cooking Feature.

Symbols	Food	Serving size	Cooking time	Standing time
Drink Đồ uống	Drinks	150 ml	1 min 10 sec	1-2 min.
Soup/Sauce Canh/ Súp	Soup/Sauce (chilled)	200-250 g	3 min	2-3 min.
Fresh Vegetables Rau quả tươi	Fresh vegetables	300-350 g	6 min 40 sec	2-3 min.



COOKWARE GUIDE

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used. Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
Aluminum foil	✓ X	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Browning plate	✓	Do not preheat for more than eight minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	X	May catch fire.
• Recycled paper or metal trims	X	May cause arcing.
Glassware		
• Oven-to-table ware	✓	Can be used, unless decorated with a metal trim.

Cookware	Microwave-safe	Comments
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	X	May cause arcing or fire.
• Freezer bag twist ties	X	
Paper		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	X	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓ X	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended

✓X : Use caution


X : Unsafe




CLEANING YOUR MICROWAVE OVEN


The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and Roller rings

 **ALWAYS** ensure that the door seals are clean and the door closes properly.

 Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces or on the roller ring with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the turntable and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

 **DO NOT** spill water in the vents. NEVER use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly

TECHNICAL SPECIFICATIONS

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MW71B, ME71B
Power source	230 V ~ 50 Hz
Power consumption Microwave	1150 W
Output power	100 W / 800 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OM75S(31)
Cooling method	Cooling fan motor
Dimensions (W x H x D) Outside Oven cavity	489 x 275 x 320 mm 330 x 211 x 309 mm
Volume	20 liter
Weight Net	10.5 kg approx (MW71B) 11 kg approx (ME71B)



QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300-362-603	www.samsung.com
NEW ZEALAND	0800-SAMSUNG (0800-726-786)	
CHINA	400-810-5858	
HONG KONG	(852) 3698-4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	3030-8282 1800-1100 11 1800-3000-8282 1800-266-8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	
JAPAN	0120-327-527	
MALAYSIA	1800-88-9999	
PHILIPPINES	1-800-10-SAMSUNG (726-7864) for PLDT 1-800-3-SAMSUNG (726-7864) for Digitel 1-800-8-SAMSUNG (726-7864) for Globe 02-5805777	
SINGAPORE	1800-SAMSUNG (726-7864)	
THAILAND	1800-29-3232 02-689-3232	
TAIWAN	0800-329-999 0266-026-066	
VIETNAM	1-800-588-889	

Code No.: DE68-03801G-02

